

Thank you for your purchase. Please follow the instructions for correct assembly. While we took great effort to ensure these assembly instructions were correct at the time of printing, sometimes updates are required post production. For the most up to date versions please refer to the product page on our website. mocka.com.au/mocka.co.nz

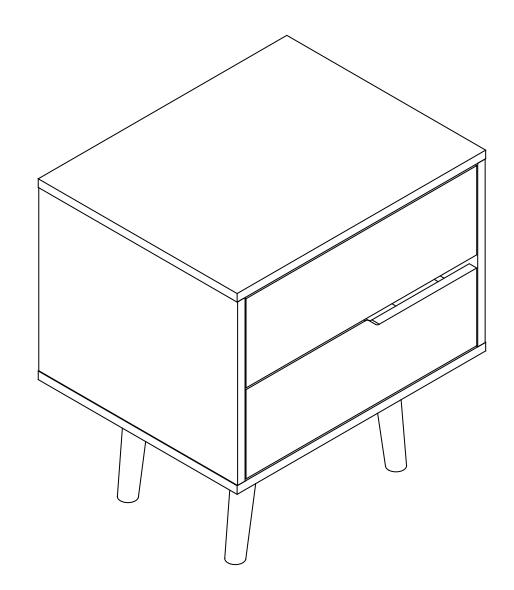




### Panel Layout

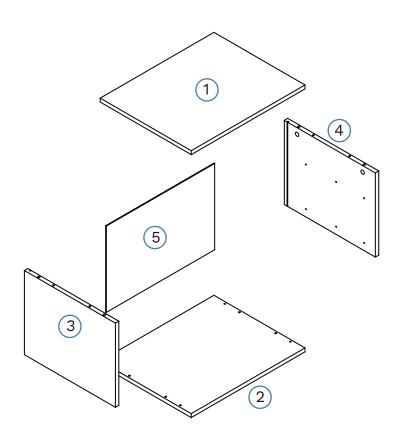

40 x4


32 33 33 30 35

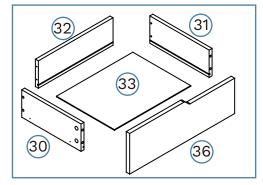


# Partlist

1	Top Panel	x1	31	Right Drawer Side	x2
2	Bottom Panel	x1	32	Drawer Back	x2
3	Left Side Panel	x1	33	Drawer Base	x2
4	Right Side Panel	x1	35	Drawer Front	x1
5	Back Panel	x1	36	Drawer Front	x1
30	Left Drawer Side	x2	40	Leg	x4



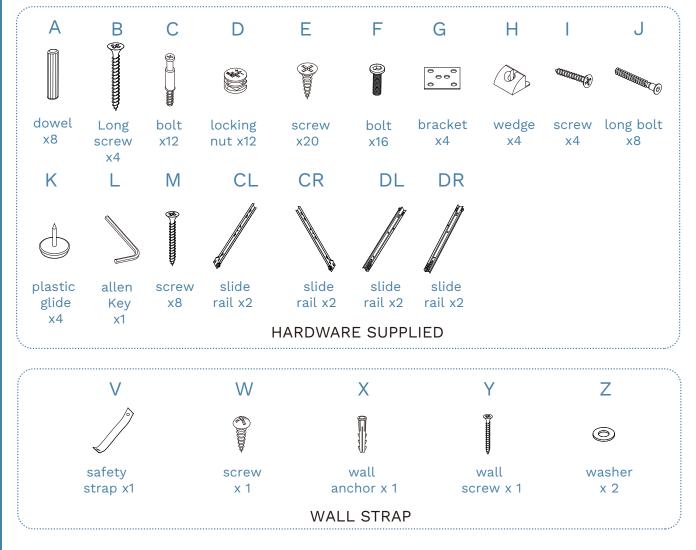


WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall. We supply a free safety wall anchor with all furniture sold and we recommend these are used to prevent your product tipping. The fixing device provided should fit most wall types, but please note that different wall materials may require different fixing devices from those supplied.

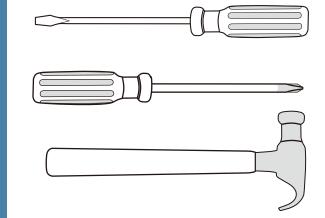

Phillips & Flathead screwdrivers and hammer required

For quicker assembly, we recommend the use of a power drill on a low-speed setting.



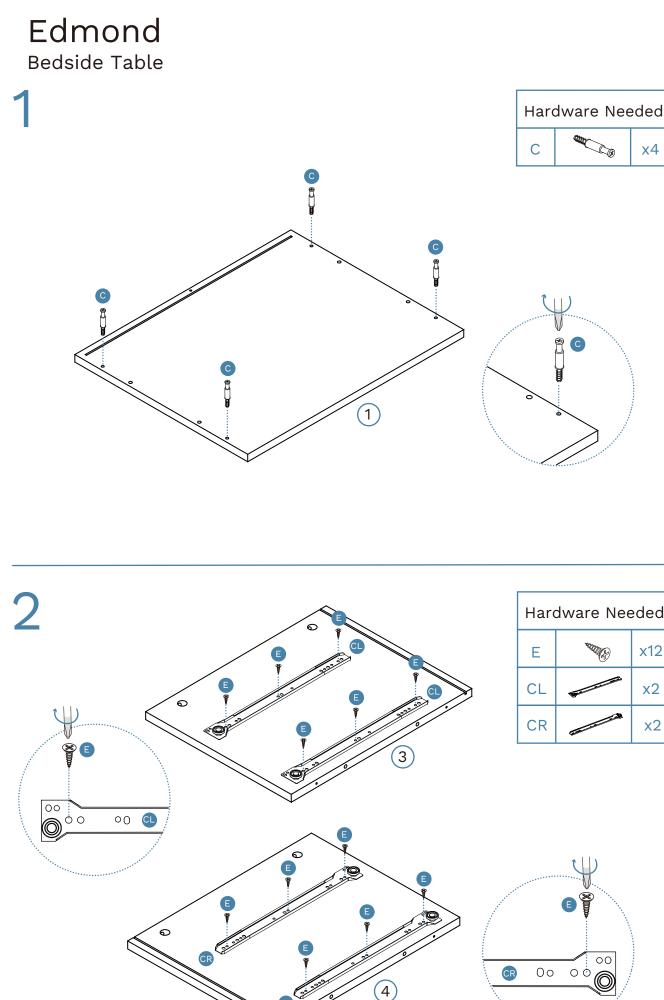

00

and CO


C

x4


x12

x2


x2

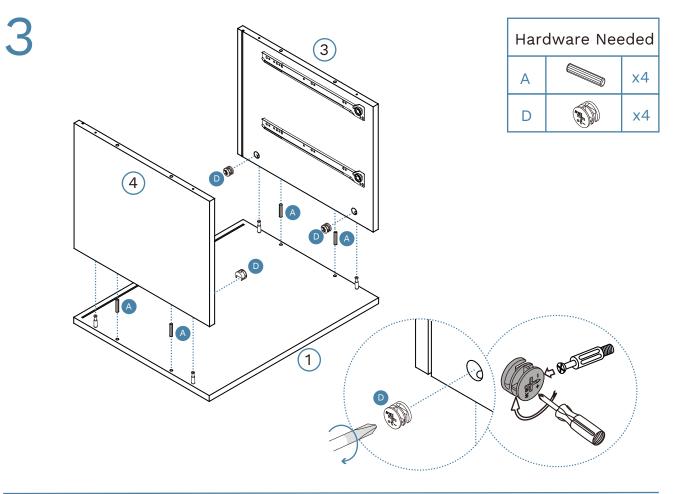



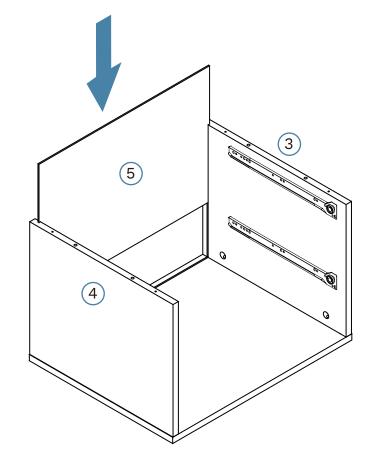




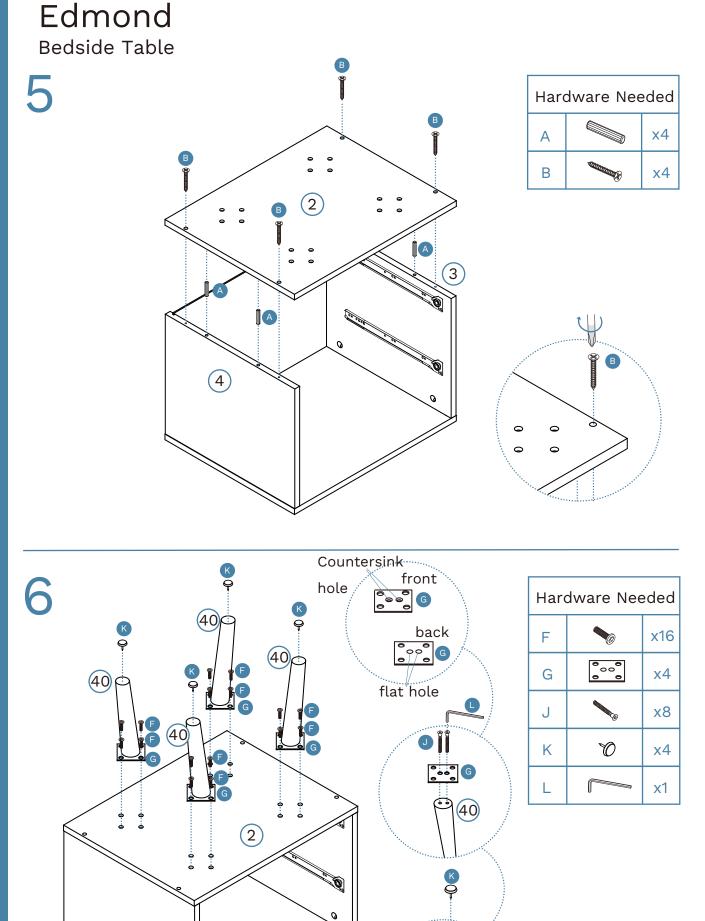


40


Turn Over


Mocka.

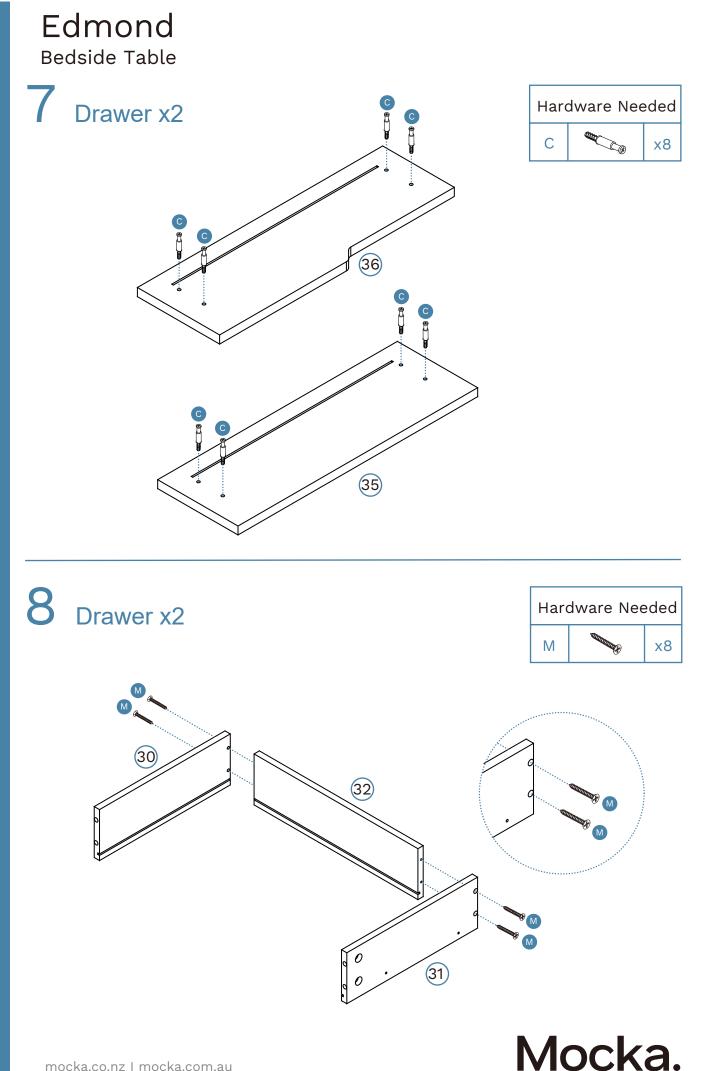


9

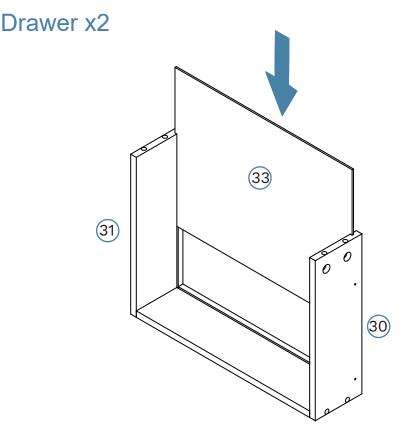

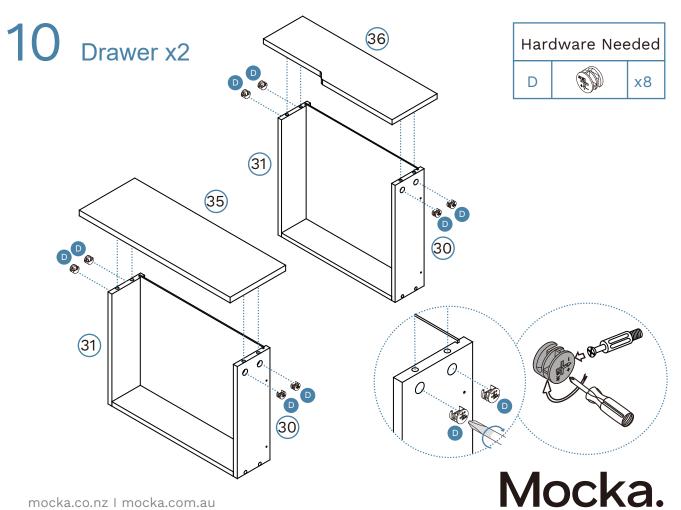

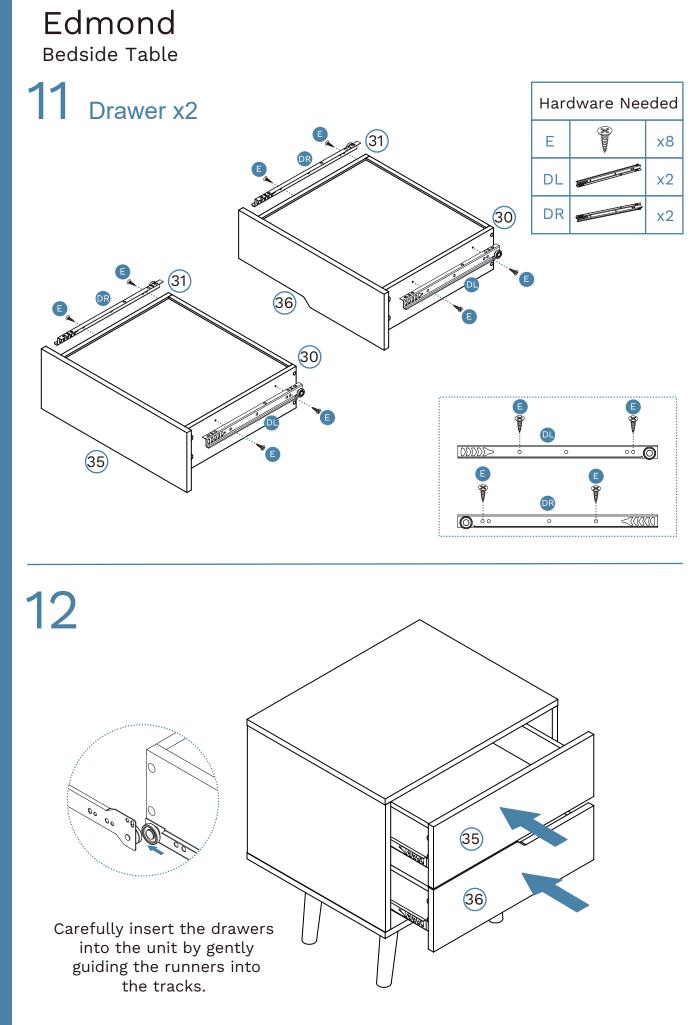

Mocka.

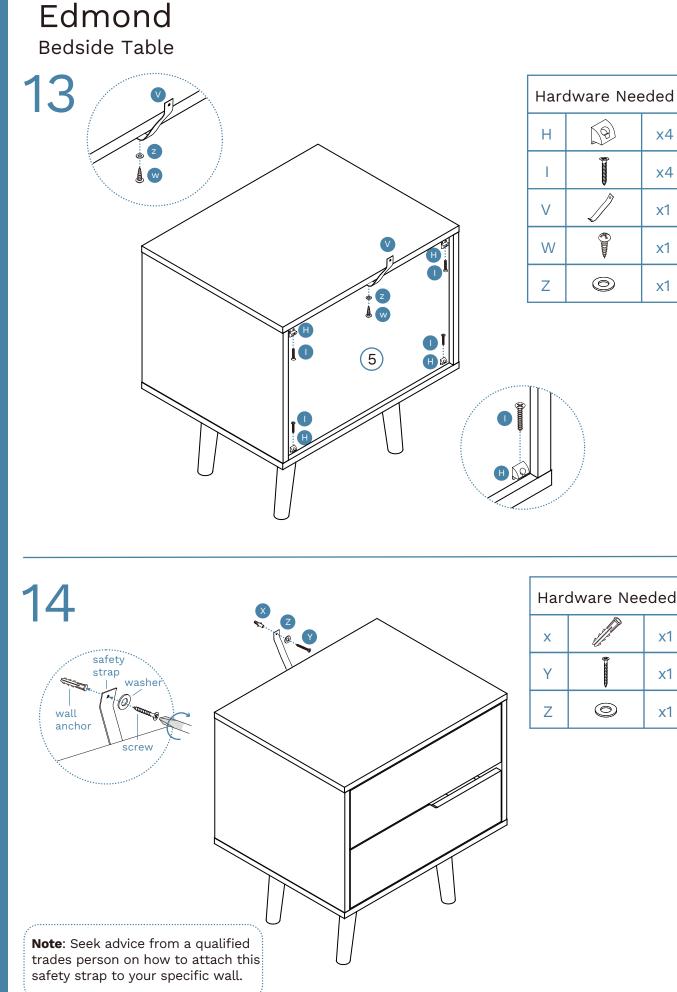

Once assembled lift furniture into place, do not drag. You're done, enjoy!

mocka.co.nz I mocka.com.au

