




# Hello, I've arrived!

Now that I'm here you are only one flat-pack away from transforming your home.

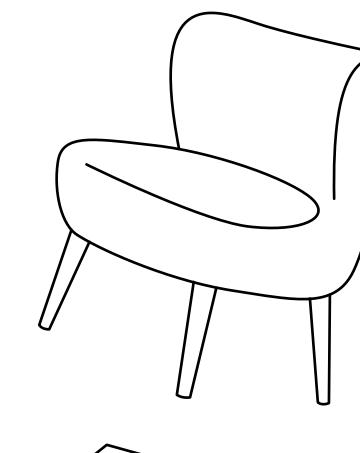

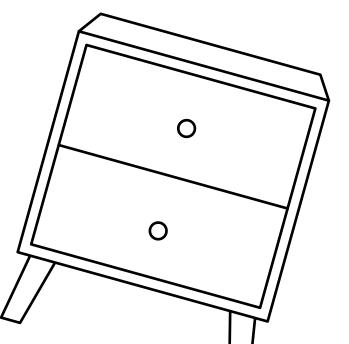



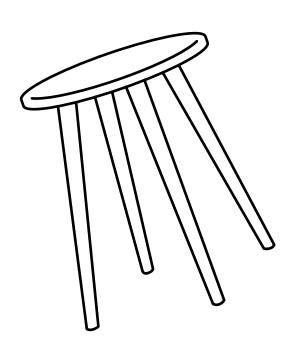

### Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create beautifully functional spaces to feel comfortably you.

#### Here are a few assembly tips before you get started:



#### Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions—you are already on your way to creating a beautifully functional space!



#### Set The Mood

Put on your favourite playlist, order that pizza and pour yourself a drink to get in the mood!



#### **Tool Check**

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



#### Room Reveal

You did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging and share a pic of your room reveal—we love seeing how you transform your home! Tag us @mockaaustralia/@mockaanz


Happy flat-packing!



Need help? Our Support Team are available via live chat, email or phone. Visit our website for details.



Thank you for purchasing Riley Boucle Queen Bed. Please follow the manufacturer's assembly instructions in detail.

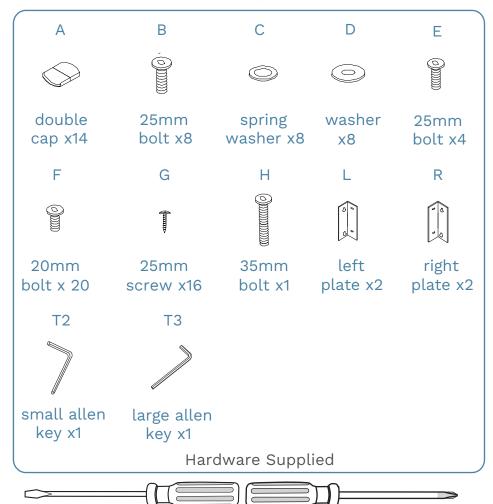




For quicker assembly, we recommend the use of a power drill on a low-speed setting.




#### \* IMPORTANT NOTICE \*

When moving the bed, please lift off the ground with two people. DO NOT drag, push or pull the bed across the floor, as this can result in damage to the supporting leg.




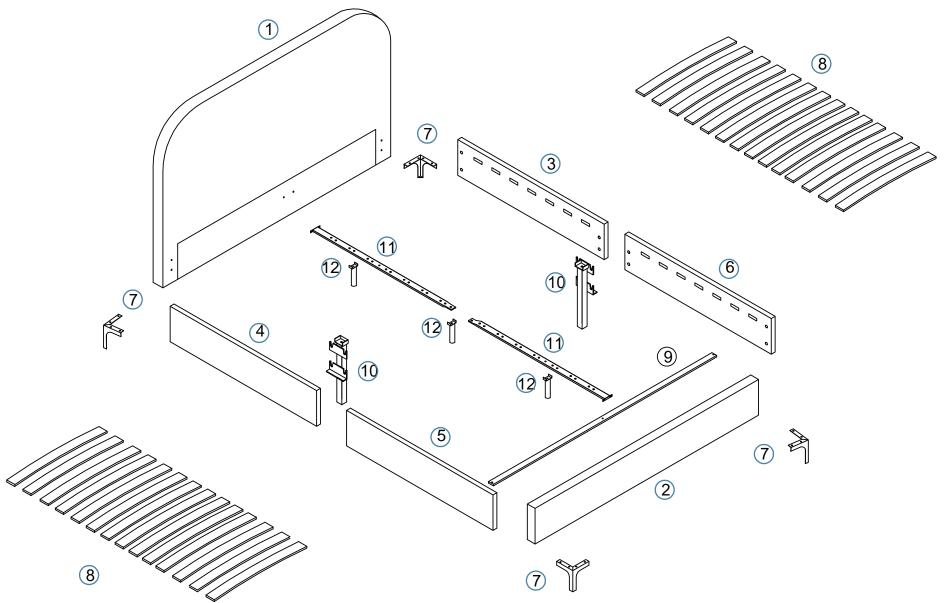

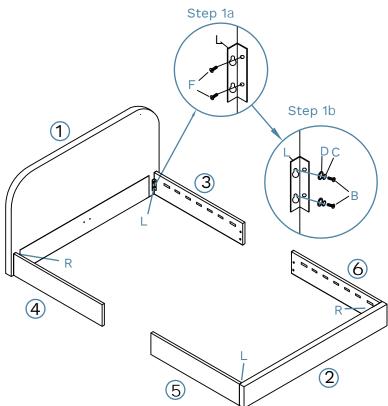

1a: Attach 1x left plate (L) and 1x right plate (R) to panels [1], [3] and [4] and secure with 4x spring washers (D), 4x washers (C), 4x 25mm bolts (B), 4 x20 bolts (F). Tighten with Allen Key (T2) and (T3). Do not completely tighten the screws until the complete frame is built.

1b: Attach 1x left plate (L) and 1x right plate (R) to panels [2], [5] and [6] and secure with 4x spring washers (D), 4x washers (C), 4x 25mm bolts (B), 4 x 20 bolts (F). Tighten with Allen Key (T2) and (T3). Do not completely tighten the screws until the complete frame is built.

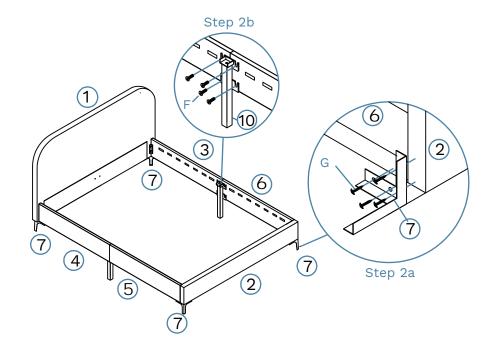



2a: Attach 4 x legs (7) to assembled frame and secure with 16 x bolts (G). Tighten with a screwdriver.

2b: Attach 2 x legs (10) to assembled frame and secure with 8 x bolts (F). Tighten with Allen Key (T3).

3



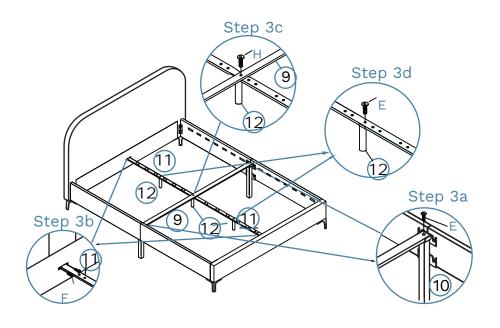

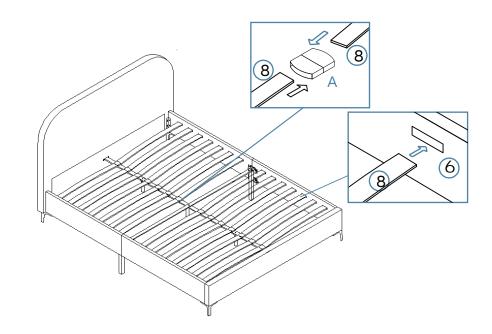

3a: Attach panel [9] to assembled frame and secure with 4 x bolts (E). Tighten with Allen Key (T3).

3b: Attach panel [11] to assembled frame and secure with 4 x bolts (F). Tighten with Allen Key (T3).

3c: Attach panel [9] to panel [12] and secure with 1  $\times$  bolts (H). Tighten with Allen Key (T3).

3d: Attach panel [11] to panel [12] and secure with 2  $\times$  bolts (E). Tighten with Allen Key (T3).

mocka.co.nz I mocka.com.au

Join the bed planks together in the middle of the frame using 14x double caps (A). Insert the end of the planks into the bed frame as shown and attach the double caps (A) into panel [8]. Make sure the double caps (A) click securely into place.



Lift the bed into the desired location, do not drag, You're done, enjoy!



Remove all liquid and food spills immediately ONLY with a clean, damp, undyed white cloth. Do NOT use abrasives or common household detergents.



## Caring for our world.

In the interest of our environment, please dispose of all packaging thoughtfully.



## Good news, you're all done!

Love it and share it on Instagram by tagging



(i) @mockaaustralia | @mockanz